

WINDOW FILM WET APPLICATION INSTRUCTIONS

YOU WILL NEED

TRIGGER SPRAYER (eg OLD BATHROOM CLEANER BOTTLE, OR PLANT MISTER)

3-4 DROPS OF DISH WASHING LIQUID

PLASTIC SQUEEGEE OR CREDIT CARD & PIECE OF CLEAN CLOTH

- 1. CUT VINYL SHEET TO SIZE REQUIRED (IF APPLYING TO A WINDOW MEASURE THE SIZE OF THE WINDOW AND TAKE OFF 2 MILLIMETERS ALL ROUND MAKING THE PANEL SLIGHTLY UNDER SIZED (THIS WILL MAKE APPLICATION OF THE PANEL EASIER)**
- 2. ENSURE YOUR WINDOW OR SURFACE IS COMPLETELY CLEAN AND FREE OF GREASE, DUST OR ANY OTHER FOREIGN OBJECTS OR RESIDUES.**
- 3. IN A BOWL MIX UP 2 CUPS OF CLEAN WATER WITH 3-4 DROPS OF DISHWASHING LIQUID. (NOW POUR INTO THE TRIGGER SPRAYER IF YOU HAVE ONE)**
- 4. SPRAY THE SURFACE WITH THE SOLUTION (IF YOU DO NOT HAVE A SPRAYER USE A CLEAN RAG TO APPLY THE SOAPY SOLUTION)**
- 5. REMOVE THE DECAL FROM THE BACKING SHEET AND APPLY TO SURFACE (DO THIS CAREFULLY SO AS NOT TO RIP THE WINDOW FILM)**
- 6. THE SOAPY SOLUTION YOU APPLIED EARLIER WILL ALLOW YOU TO MOVE THE DECAL AROUND OR REMOVE AND RE-POSITION TO GET IT LINED UP TO YOUR SATISFACTION.**
- 7. ONCE THE DECAL IS LINED UP USE A SQUEEGEE OR A CREDIT CARD WITH A CLEAN CLOTH WRAPED AROUND, WORK FROM THE CENTRE, WORKING THE WATER AND ANY BUBBLES CAREFULLY OUT TO THE EDGES. MAKE SURE YOU PRESS FIRMLY TO MAKE THE CONTACT ADHESIVE WORK PROPERLY.**
- 8. ANY TINY BUBBLES LEFT CAUSED FROM NOT WORKING AIR OUT FROM THE CENTRE TO THE EDGES CORRECTLY SHOULD DISSIPATE IN A COUPLE OF WEEKS.**

**FOR A VISUAL APPLICATION GUIDE VISIT OUR WEBSITE
WWW.JAFGRAPHICS.CO.UK**